## Instructions for fitters or electricians



## Test mode

Fitters or electricians have a test mode for the basic function: the door is opened by placing any finger on the fingerprint scanner. Test mode is only available within the first 10 minutes after power is applied. After this period of time has elapsed or after the system has been activated, this function is deactivated.

## Activating an ekey fingerprint scanner

Your customer needs the 'ekey bionyx app' to activate the system. This guides him intuitively through the entire activation process.



## **Prerequisite for activation**

**ekey dLine:** A stable, password-protected 2.4 GHz WLAN network with WPA-PSK2 encryption is essential in the wireless range of the front door.

**ekey xLine/sLine:** A stable, password-protected 2.4 GHz WLAN network with WPA-PSK2 encryption or a LAN network is essential in the range of the control unit DRM.

You can also set up activation via a hotspot on your mobile device. The procedure for setting up the hotspot can be found in the operating instructions for your mobile device.

You need help? Our support is there for you!

Austria & Germany E: support@ekey.net

**Switzerland & Liechtenstein** E: supportschweiz@ekey.net Adriatic East region E: info@ekey.si

International E: support@ekey.net