

# Instructions for fitters or electricians

## Test mode

Fitters or electricians have a test mode for the basic function: the door is opened by placing any finger on the fingerprint scanner. Test mode is only available within the first 10 minutes after power is applied. After this period of time has elapsed or after the system has been activated, this function is deactivated.

## Activating an ekey fingerprint scanner

Your customer needs the 'ekey bionyx app' to activate the system. This guides him intuitively through the entire activation process.

### ekey bionyx app



Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google LLC.

### More details can be found here:



## Prerequisite for activation

A stable, password-protected 2.4 GHz WLAN network with WPA-PSK2 encryption is essential in the wireless range of the front door.

You can also set up activation via a hotspot on your mobile device. The procedure for setting up the hotspot can be found in the operating instructions for your mobile device.

## Do you need support? Our technical support department is here for you!

### Austria & international

Mon–Thu: 8:00 AM–5:00 PM  
Fri: 8:00 AM–1:00 PM  
T: +43 732 890 500 – 0  
E: support@ekey.net

### Germany

Mon–Thu: 8:00 AM–5:00 PM  
Fri: 8:00 AM–1:00 PM  
T: +49 6187 906 96 – 0  
E: support@ekey.net

### Adriatic East region

Mon–Thu: 8:00 AM–4:00 PM  
Fri: 8:00 AM–12:00 PM  
T: +386 1 530 94 95  
E: info@ekey.si

### Switzerland & Liechtenstein

Mon–Thu: 8:00 AM–11:45 AM, 1:45 PM–5:00 PM  
Fri: 8:00 AM–11:45 AM  
T: +41 71 560 54 84  
E: supportschweiz@ekey.net

### Italy

Mon–Fri: 9:00 AM–12:00 PM, 2:00 PM–5:00 PM  
T: +39 0471 922 712  
E: italia@ekey.net