Mounting instructions
ekey dLine fingerprint scanner (solid material)

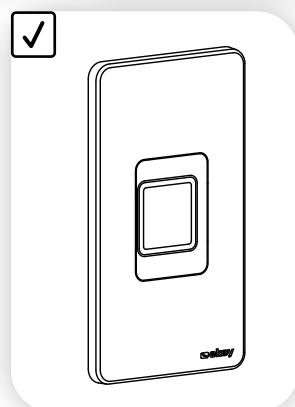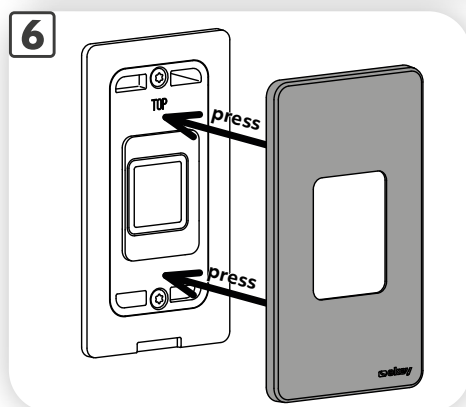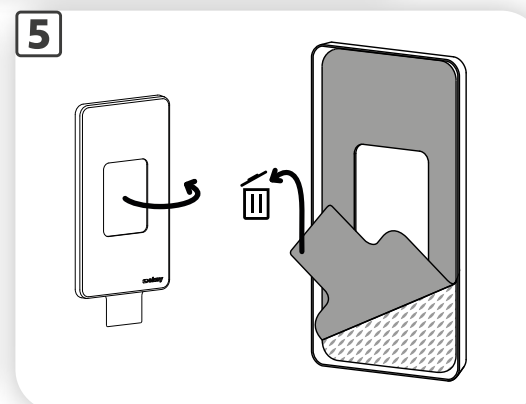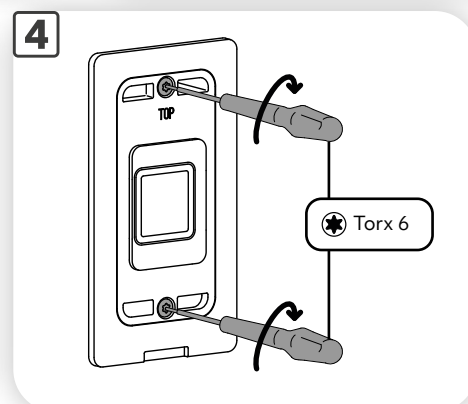**ekey**
YOUR FINGER. YOUR KEY.

850446

1

2

3

TOP

TOP

4

TOP

✱ Torx 6

5

6

TOP

press

press

✓
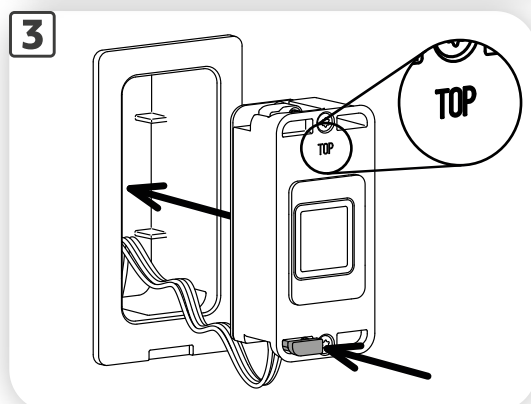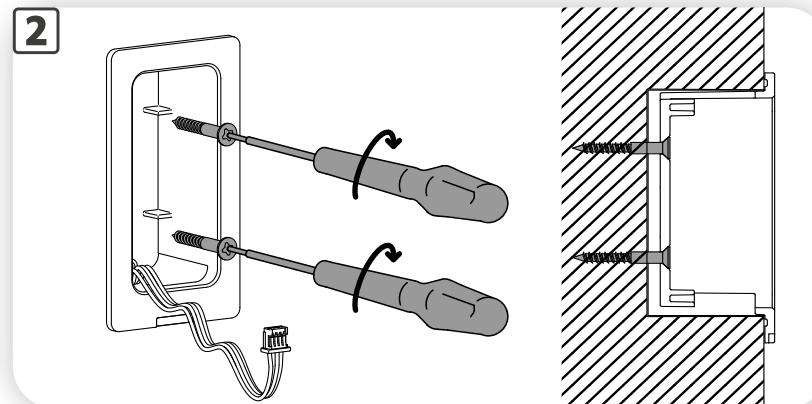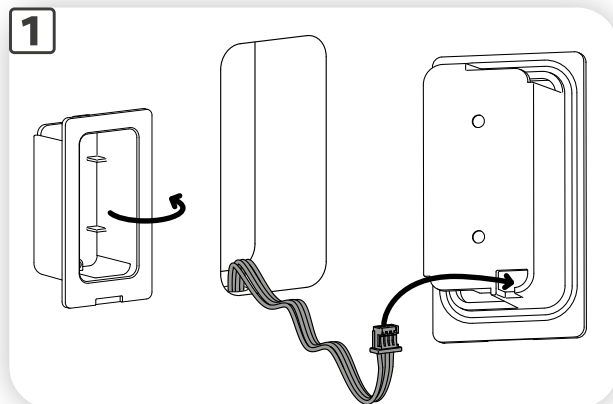
RECOMMENDED MOUNTING HEIGHT

155 cm
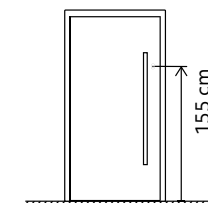
⚠ ATTENTION

Property damage in the event of incorrect mounting and wiring: The system devices are operated using electricity. They could be destroyed if they are mounted and wired incorrectly.
Mount and wire the system devices correctly before connecting the power.

🗎 NOTICE

These Mounting instructions are not subject to updating. We reserve the right to make technical modifications and change the product's appearance; any liability for errors and misprints is excluded.